

aspire®

POCKEX USER MANUAL



- 1 * Pockex Device
- 1 * USB Cable
- 1 * Warranty Card
- 2 * 0.6Ω 316L SS Atomizers
- 1* User Manual

PockeX Dimensions

Diameter: 19.7mm

Length: 117.7mm

PockeX Features

- Top-Fill - Easy to Fill
- Replace Coils without draining E-Liquid
- Top Airflow
- Leak Proof Design
- 2ML Capacity - TPD Compliant
- U-tech Coil: 0.6Ω 316L SS(18-23w)

Coil Installation

1. Unscrew and remove the top cap
2. Screw the coil onto the top cap
3. Screw top cap back onto the PockeX

PockeX Battery Instructions

- Press the fire button 5 times rapidly to power the PockeX On or Off. The LED lights around the button will flash blue and pink for 3 times to indicate On or Off.
- While the device is on, the LED light will indicate the PockeX's charge level, when the battery charge is above 30%, the light will be blue; When the battery charge is less than 30%, the LED light around the fire button will be orange. Orange light is a cue to let you know your PockeX is in low battery.

PockeX Specifications

- Battery Capacity: 1500mah
- Bypass Output
- Coil Resistance: 0.5Ω -2.0Ω

PockeX Charging instructions

- Charge via USB port. Maximum charge current can reach up to 800mA.
- Connect your PockeX to the charger. The light at the bottom will turn red to indicate the PockeX is charging. When the PockeX is fully charged, the light will turn green.