

VAPIRRISE[®]_{2.0}
ULTIMATE/HOOKAH
USER GUIDE
ENGLISH / ESPAÑOL

VAPIR[™]

VapirRise is a Trademarked name owned by Vapir[™] and protected by all US and International Copyright laws.
The VapirRise Vaporizer utilizes Patented Technology protected by US Patent No: 6095153, 6772756 & 6990978

Important Safety Information

1. This appliance can be used by persons aged from 18 years or older and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Minors shall not play with the appliance. Cleaning and maintenance shall not be performed by minors.
2. The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.

VapirRise2.0®- 110V
110-120VAC, 60Hz, 1.8A

VapirRise2.0®- 220V
220-240VAC, 50Hz, 0.8A

Table of Contents

Table of Contents	01
Included in the Box	02
Identifying the Parts	03
Safety Mechanisms	04
Pre-Usage Instructions	05
Preparing to Vaporize	06
Direct Inhalation	07
Inflating a Vapor Balloon (Ultimate Edition Only)	08
Aromatherapy Instructions	09
Maintenance & Cleaning	10
Replacement Parts & Accessories	11
Additional Information	12


Included in the Box

ENG
2

	Hookah	Ultimate
VapirRise2.0® Vaporizer	1	1
Power Cord	1	1
Chamber	1	1
Oil Chamber	1	1
Adapter	1	1
Single-User	1	1
Multi-User	1	1
Hot Grabber	1	1
Inflation Balloon		3
HEPA Air Filter (pre-installed)	1	1
40" Silicon Tube	4	2
X-Tip Mouthpiece	4	4
Cleaning Brush	1	1
User Guide	1	1
Quick-Start Guide	1	1

Identifying the Parts

- 1- VapirRise2.0® Unit
- 2- Power Cord
- 3- Power Cord Input
- 4- ON/OFF Main Switch
- 5- Fan Speed Touch Panel
- 6- Temperature Touch Panel
- 7- LCD Display
- 8- Heat Button
- 9- HEPA Air Filter
- 10- Filter Cover
- 11- Adapter
- 12- Adapter O-Ring
- 13- Plunger Screen
- 14- Chamber
- 15- Oil Chamber
- 16- Hot Grabber
- 17- Single-User
- 18- Multi-User
- 19- Balloon (Ultimate Edition Only)
- 20- Silicon Tube
- 21- X-Tip Mouthpiece

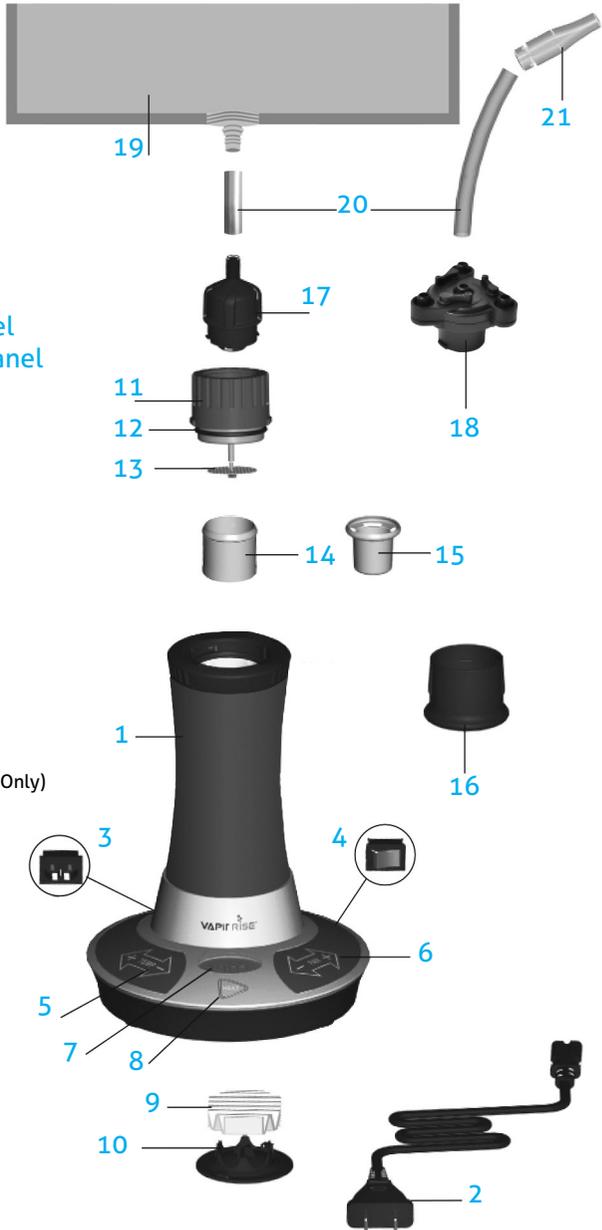

Safety Mechanism

- **If Heating Element is engaged:** The unit will shut off automatically after 20 minutes of continuous use; to resume, simply press the heat button.

- **If Heating Element is not-engaged:** the VapirRise2.0® safety feature will automatically turn off the fan after 5 minutes. You can re-engage fan at any time by utilizing the touch panel.

IMPORTANT: Located at the top part of the VapirRise2.0® are two air vents on the outside of the heating chamber. These vents must be kept open at all times or overheating may occur.

CAUTION:

When exposed to heat all stainless steel parts will become very hot; **DO NOT TOUCH ANY EXPOSED METAL DURING OR AFTER VAPORIZATION.** Always utilize the Hot Chamber Grabber to move any items which have been exposed to heat.

The appliance is only to be used with items recommended in the manual and is not recommended for any other type of materials or substances.

Pre-Usage Instructions

- Prior to using the tube attachment make sure to soak it in warm water.

TIP: **DO NOT USE BOILING WATER**

- There is a pre-installed HEPA Air Filter inside the filter place, at the bottom of your unit.
- It is recommended the HEPA Air Filter be replaced periodically to ensure maximum filtration and airflow ([See Page-10](#)).
- Temperature display can be changed from Fahrenheit to Celsius and vice-versa by holding your finger on the Heat Button until the temperature unit is changed.

Fan Speed Chart:

Fan Speed Level	Application
0	Fan-less mode; to be used for Direct Inhalation ONLY
1-5	Recommended for Direct Inhalation
6-9	Recommended for Balloon Inflation (Ultimate Edition Only)

TIP: **Lower fan speeds provide denser vapor.**

Preparing to Vaporize

- Plug in your VapirRise2.0® and power on the unit.
- Grind your herbs very finely.
- Insert ground up herbs into the Chamber.
- Gently push together pre-filled Chamber and Adapter by securely snapping into place (Figure-01).



Figure-01

Never touch exposed metal parts during or after vaporizing as they will be extremely hot. Always utilize the Hot Grabber when moving or opening the Chamber (or Oil Chamber).



Figure-02

- With the Chamber and Adapter securely assembled, push the Plunger down to fully compact the herbs.
- Utilizing Temperature Touch Panel, set the desired temperature, a good median range to begin with is between 350-380°F (Figure-02).

TIP: If you are getting smoke turn the temperature down & if you are not getting enough flavor, turn the temperature up. This process will help you to find your preferred temperature.

- Begin heating process by touching the Heat Button which will illuminate red to indicate heating has begun.

TIP: The fan will automatically revert to Setting 2 while the unit is heating to reach desired temperature more efficiently. Once the unit has reached the desired temperature you can adjust the fan speed.

TIP: Once the unit has reached the desired temperature, the red backlight on Heat Button will switch to green to indicate the unit is ready to use.

Direct Inhalation

•Prior to utilizing the Direct Inhalation function, please take the time to review the section: [Preparing to Vaporize \(Page-6\)](#).

Single-User:

- Insert Single-User into pre-assembled Chamber+Adapter and secure by gently twisting clock-wise ([Figure-03](#)).
- Insert Single-User assembly into the pre-heated unit by twisting clock-wise until secure.
- Set fan to desired speed ([See Page-5](#)).



Figure-03

Multi-User:

- Insert Multi-User into pre-assembled Chamber+Adapter and secure by gently twisting clock-wise ([Figure-04](#)).
- Attach a tube to the middle nozzle; attach tubes only to the outside nozzles which will be used and open their valves.
- Insert Multi-User assembly into the pre-heated unit by twisting clock-wise until secure.
- Set fan to desired speed ([See Page-5](#)).



Figure-04

Inflating a Vapor Balloon (Ultimate Edition Only)


•Prior to utilizing the Balloon Inflation function, please take the time to review following sections:

[Preparing to Vaporize \(Page-6\)](#) & [Direct Inhalation \(Page-7\)](#).

•Prior to inflating the balloon, open the Balloon cap by turning it counter-clockwise.

•Insert the silicon tube into the balloon opening and simply push until secure ([Figure-05](#)).

Figure-05

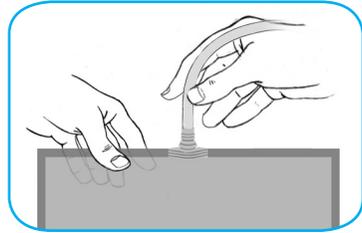

•Attach the other end of silicon tube onto the Single-User assembly which is already seated on the preheated unit and ready to use ([See Page-7, Single-User](#)).

•Set the desired fan speed and balloon should automatically begin to inflate.

TIP: [For the Fan Speed Chart please refer to Page-5.](#)

•Once balloon is inflated, turn off the heat.

•Remove the silicon tube from the Single-User end while it's still connected to the balloon.

•Using the silicon tube, inhale directly from the balloon and enjoy!

Never touch exposed metal parts during or after vaporizing as they will be extremely hot. Always utilize the Hot Grabber when moving or opening the Chamber (or Oil Chamber).



Aromatherapy Instructions

Aromatherapy utilizes essential oils in a range of treatments designed to promote the well-being of mind, body and spirit. Only 100% pure essential oils are derived completely from plants and recommended for usage with aromatherapy. The VapirRise2.0® comes with an Oil Chamber to create your own aromatherapy sessions.

- While the unit is heating up place a few drops of pure essential oil into the Oil Chamber.

TIP: The more essential oil used, the more intense and longer lasting the aromatherapy session.

- Gently push together Oil Chamber and the Adapter by securely snapping into place (Figure-06).

Figure-06



- Once the unit has reached desired temperature, insert the fully assembled Oil Chamber + Adapter into the pre-heated unit by twisting clock-wise until secure.

- Set preferred fan speed for a more or less intense aromatherapy session.

Never touch exposed metal parts during or after vaporizing as they will be extremely hot. Always utilize the Hot Grabber when moving or opening the Chamber (or Oil Chamber).



Maintenance & Cleaning

Screens:

It is strongly recommended that both Chamber screen (Figure-07) and Plunger screen (Figure-08) are kept clean at all times. Cleaning screens periodically allows for maximum airflow and optimal performance.



Figure-07



Figure-08

HEPA Air Filter:

The VapirRise2.0[®] comes with one pre-installed HEPA Air Filter at the bottom of unit, inside the filter place. It is recommended the HEPA Air Filter be replaced periodically to ensure maximum filtration and airflow. You can do so by opening the filter cover, removing the old filter and inserting a new one (Figure-09).

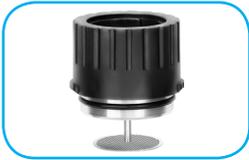


Figure-09

*Periodically cleaning VapirRise2.0[®] unit is also recommended. Lightly moisten the Cleaning Brush or a Q-Tip with rubbing alcohol to clean soiled areas.

TIP: Be sure not to put too much rubbing alcohol on the Q-Tip as excess moisture can damage internal components.

Replacement Parts & Accessories



Adapter



Chamber



Oil Chamber




Adapter O-Ring




Single-User



Multi-User

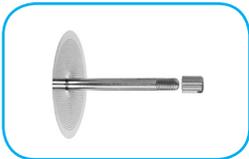

Plunger Screen Set

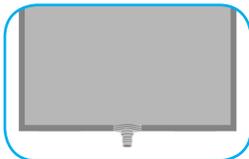

Inflation Balloons
(Ultimate Edition Only)



HEPA Air Filter



40" Silicon Tube



10 Pack of X-Tips

Replacement parts for this unit can be purchased directly at www.vapir.com or by calling 1.800.841.1022

Additional Information

Suggested Vaporizing Temperatures:

Clove: (125C to 150C) 257F to 302F

Dandelion: (125C to 150C) 257F to 302F

Lavender: (100C to 125C) 212F to 257F

Peppermint: (100C to 150C) 212F to 302F

Sage: (125C to 150C) 257F to 302F

Saw Palmetto: (125C to 175C) 257F to 347F

Cats Claw: (150C to 175C) 302F to 347F

Damiana: (150C to 175C) 302F to 347F

Garlic: (170C to 185C) 337F to 365F

Ginger: (170C to 185C) 337F to 365F

Warranty Information:

Vapir stands behind their products and customers; your VapirRise2.0® is covered under warranty for 2 years against any manufacturing defects. Warranty registration should be completed within 30 days of original purchase.

To register your warranty, please go to www.vapir.com/warranty

If you are interested in purchasing an extended warranty, you can call Vapir Customer Service at 1.800.841.1022 Mon-Fri 9am-5pm PST.

Disclaimer:

All Vapir Vaporizers are intended for legal usage only. Vapir makes no claims about any health risks associated with smoking or vaporizing. Vaporizing may not remove all health risks associated with smoking. If you are unsure about any health risks associated with smoking or vaporizing please consult your doctor prior to using a vaporizer. Vaporize at your own risk.

Designed by Vapir Inc. in California, USA

Tel: 800.841.1022 Fax: 408.649.2785

Copyright:

This material is copyrighted by Vapir, Inc., and maybe reproduced for internal use only.

All other reproduction, in whole or in part, is prohibited without the written consent of Vapir, Inc.

©2014 Vapir, Inc. All Rights Reserved.

